



# Sony Ericsson W580i LCD Replacement

Replace a broken LCD on your phone.

Written By: Diego



---

## INTRODUCTION

Use this guide to help you replace the LCD.



### TOOLS:

- [iFixit Opening Tools](#) (1)
- [Spudger](#) (1)




### PARTS:

- [Sony Ericsson W580i LCD](#) (1)
-



## Step 1 — Front Cover

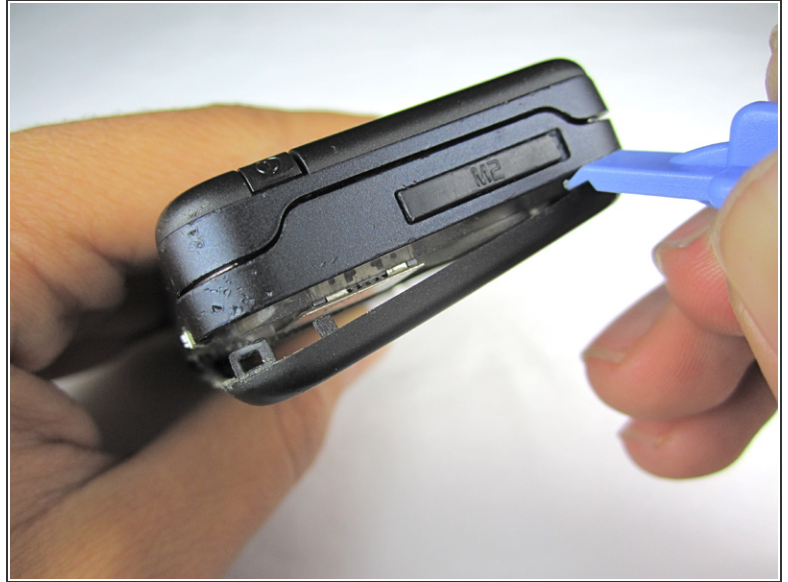

- Insert the edge of an opening tool between the front cover and the phone.
- Gently pry off the front cover working your way around the edges.

## Step 2



- Pull the front cover down and away from the phone.


⚠ The front keypads might come off with the front cover. Do not lose these.

### Step 3



- Gently peel the keypad away from the phone.


### Step 4 — LCD

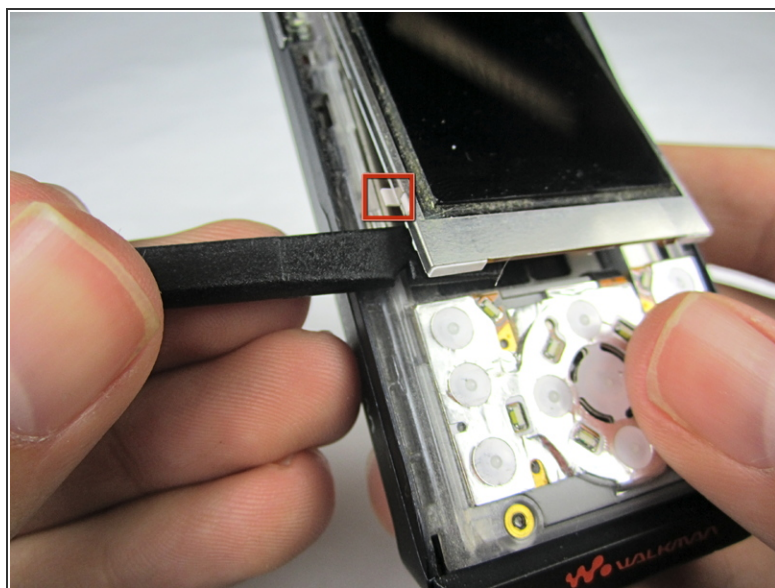

- Insert a spudger between the lower edge of the screen and the phone.
  - Pry the screen up to disconnect the tabs on each side holding the screen in.
- ⚠ Do not remove the screen yet. There is a ribbon connecting the screen to the motherboard.



## Step 5

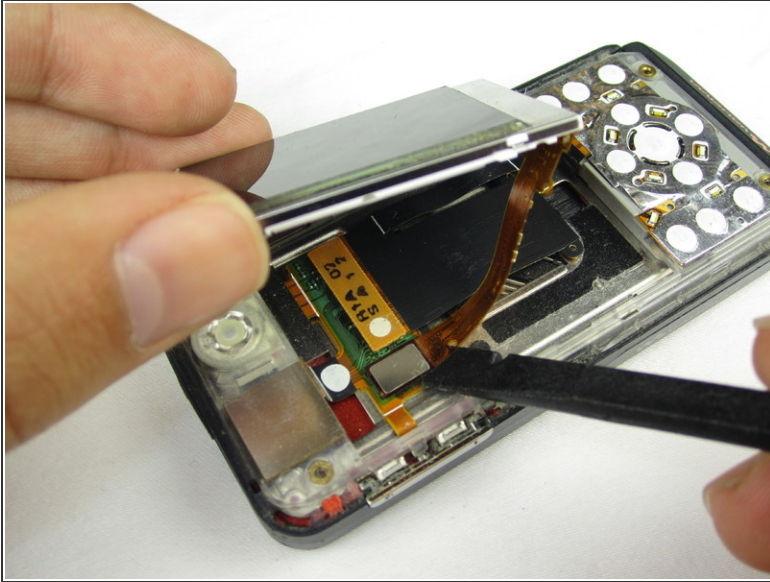

- Use a spudger to remove the ribbon cable from the motherboard.
- Lift the screen away from the phone

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-28 11:40:30 PM.